

FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN

Brake Lever Guard **Part No. BLG-18-S10-A160-GBR /**

Clutch Lever Guard **Part No. CLG-18-S10-A160-GBR /**

**BRAKE LEVER GUARD, 10mm SPACER BAR END, 160mm
PART NO. BLG-18-S10-A160-GBR**

**PLEASE NOTE: for ALL DUCATI PANIGALE V4 models, DO NOT TIGHTEN MORE THAN 8Nm.
Must be checked before and after every ride as per Manufacturer's recommendations.**

- 1 Remove existing bar end and replace with supplied assembly as in Fig 1 below.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
Torque the M6 bolt to 12Nm.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.
Please note: We recommend to use a medium thread lock (not supplied) for correct operation.



Fig. 1: ASSEMBLY



**CLUTCH LEVER GUARD, 10mm SPACER BAR END, 160mm
PART NO. CLG-18-S10-A160-GBR**

**PLEASE NOTE: for ALL DUCATI PANIGALE V4 models, DO NOT TIGHTEN MORE THAN 8Nm.
Must be checked before and after every ride as per Manufacturer's recommendations.**

- 1 Remove existing bar end and replace with supplied assembly as in Fig 1 below.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
Torque the M6 bolt to 12Nm.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.
Please note: We recommend to use a medium thread lock (not supplied) for correct operation.

Fig. 1: ASSEMBLY



FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN

UNIVERSAL BRAKE LEVER GUARD, A160 MOULDED REPLACEMENT PART ONLY
PART NO. BLG-A160

This is to be used with the GBRacing bar end and insert

- 1 Remove existing bar end and replace with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.



UNIVERSAL CLUTCH LEVER GUARD, A160 MOULDED REPLACEMENT PART ONLY
PART NO. CLG-A160

This is to be used with the GBRacing bar end and insert

- 1 Remove existing bar end and replacing it with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

