



1199 2012-2014

## FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN



THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-1199-2012-1-GBR / Secondary Clutch Cover Part No. EC-1199-2012-2-GBR

 
 
Brake Lever Guard Part No. BLG-16-A160-GBR / Clutch Lever Guard Part No. CLG-16-A160-GBR

Threaded Brake Lever Guard Part No. BLG-M18-S5-A160-GBR / Threaded Clutch Lever Guard Part No. CLG-M18-S5-A160-GBR



### SECONDARY ALTERNATOR COVER PART NO. EC-1199-2012-1-GBR



- 1 Remove left hand side fairing panel.
- 2 Remove 4 existing bolts from the Alternator cover, shown as position Bolt 1, 2, 3 & 4.
- 3 Place the Secondary Alternator Cover over the stock cover.
- 4 Assemble 4 replacement bolts loosely in the correct position as shown.  
*Note: Must use thread lock*
- 5 Tighten bolts to a Torque of 8Nm as per manufacturer's recommendations.  
DO NOT OVERTIGHTEN.
- 6 Replace left hand side fairing panel.

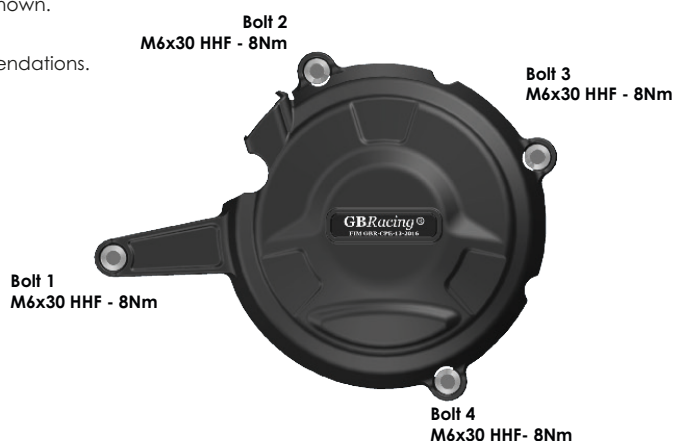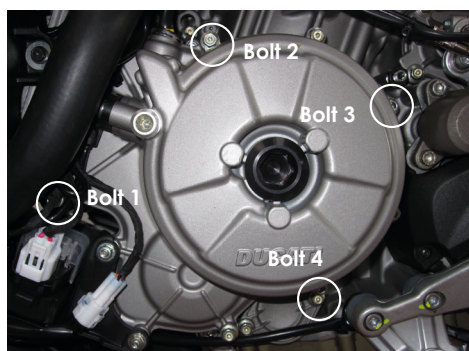

### SECONDARY CLUTCH COVER PART NO. EC-1199-2012-2-GBR

- 1 Remove right hand side fairing panel.
- 2 Remove 4 existing bolts from the Clutch cover, shown as position Bolt 1, 2, 3 & 4.
- 3 Place the Secondary Clutch Cover over the stock cover.
- 4 Assemble 4 replacement bolts loosely in the correct position as shown.  
*Note: Must use thread lock*
- 5 Tighten bolts to a Torque of 8Nm as per manufacturer's recommendations.  
DO NOT OVERTIGHTEN.
- 6 Replace right hand side fairing panel.

  **Please note:** For models 959 2016-2019 & V2 2020, the fairing will need modification and dust cover removing.

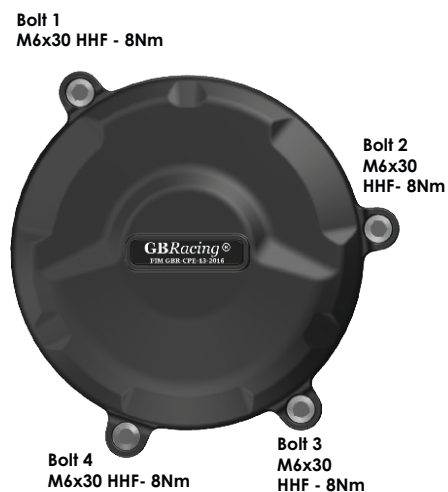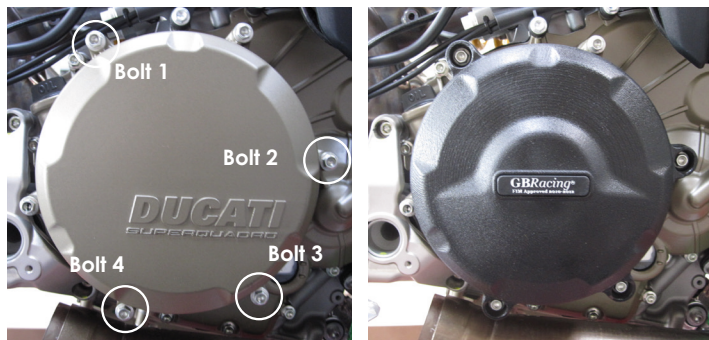

**Engine Cover Set: EC-1199-2012-SET-GBR**

EC-1199-2012-1-GBR, EC-1199-2012-2-GBR



1199 2012-2014

# FITTING INSTRUCTIONS

 
TO BE FITTED BY A QUALIFIED TECHNICIAN



## UNIVERSAL BRAKE LEVER GUARD WITH 16mm INSERT (Fits tube inside diameters from 15.8mm to 17.9mm)

### PART NO. BLG-16-A160-GBR


- 1 Remove existing bar end and replacing it with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

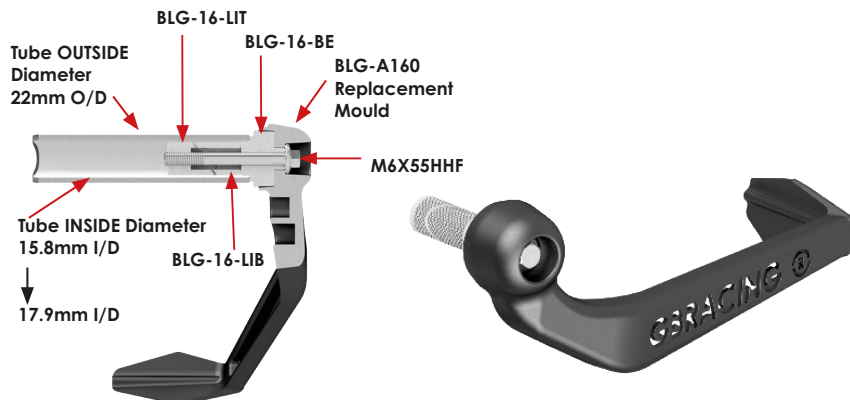

## UNIVERSAL CLUTCH LEVER GUARD WITH 16mm INSERT (Fits tube inside diameters from 15.8mm to 17.9mm)

### PART NO. CLG-16-A160-GBR

 - 1 Remove existing bar end and replacing it with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

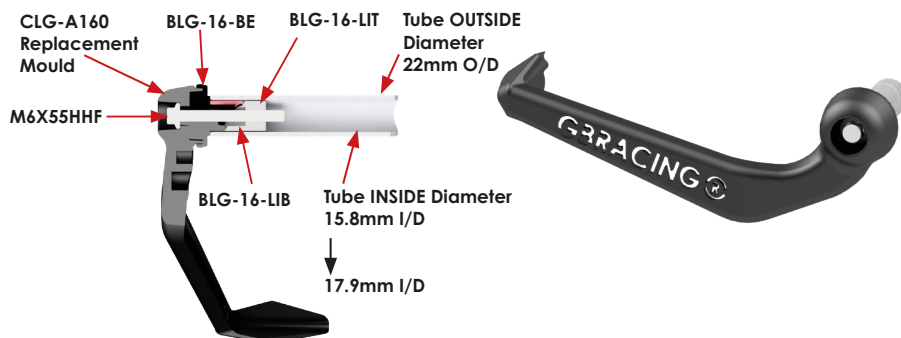

## M18 THREADED BRAKE LEVER GUARD, 5mm SPACER BAR END, 160mm

### PART NO. BLG-M18-S5-A160-GBR

- 1 Remove existing bar end and replace with supplied assembly as in Fig. 1 below.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure. Torque the M6 bolt to 12Nm.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

Please note: We recommend to use a medium thread lock (not supplied) for correct operation.

Fig. 1: ASSEMBLY





1199 2012-2014

## FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN



### M18 THREADED CLUTCH LEVER GUARD, 5mm SPACER BAR END, 160mm PART NO. CLG-M18-S5-A160-GBR

- 1 Remove existing bar end and replace with supplied assembly as in **Fig 1**.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure. Torque the M6 bolt to 12Nm.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

Please note: We recommend to use a medium thread lock (not supplied) for correct operation.



**Fig. 1: ASSEMBLY**

