

FITTING INSTRUCTIONS TO BE FITTED BY A QUALIFIED TECHNICIAN



THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-V4S-SF-2020-1-GBR / Secondary Clutch Cover Part No. EC-V4-SF-2023-2-GBR Brake & Clutch Lever Guard Part No. BLG-14-A160-GBR / CLG-14-A160-GBR



SECONDARY ALTERNATOR COVER PART NO. EC-V4S-SF-2020-1-GBR

- Remove the 4 standard bolts as shown as bolt position 1, 2,3 & 4.
- 2 Place the secondary alternator cover against the standard alternator.
- Insert the 4 supplied bolts and tighten to a maximum of 8Nm. 3

DO NOT OVERTIGHTEN







SECONDARY CLUTCH COVER PART NO. EC-V4-SF-2023-2-GBR

- Remove 4 existing bolts from the Clutch cover, shown as position Bolt 1, 2, 3 & 4.
- Place the Secondary Clutch Cover over the stock cover. 2
- Assemble 4 replacement bolts loosely in the correct position as shown. 3
- Tighten to a maximum Torque of 8Nm. <u>DO NOT OVERTIGHTEN.</u>







Bolt 1

(max)




FITTING INSTRUCTIONS TO BE FITTED BY A QUALIFIED TECHNICIAN



UNIVERSAL BRAKE LEVER GUARD WITH 14mm INSERT (Fits tube inside diameters from 13.6mm to 15.7mm) PART NO. BLG-14-A160-GBR

- 1 Remove existing bar end and replacing it with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.



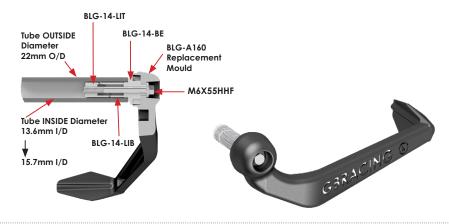

UNIVERSAL CLUTCH LEVER GUARD WITH 14mm INSERT (Fits tube inside diameters from 13.6mm to 15.7mm) PART NO. CLG-14-A160-GBR

- 1 Remove existing bar end and replacing it with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.



