


THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-RC8-2008-1-GBR / Secondary Clutch Cover Part No. EC-RC8-2008-2-GBR  
Frame Slider Set - Part No. CP-RC8-2008-SET-GBR / Paddock Stand / Bobbin Set Part No. BA12-8-GBR-SET





**SECONDARY ALTERNATOR COVER**  
**PART NO. EC-RC8-2008-1-GBR**

- 1 Remove side fairing.
- 2 Remove 3 existing bolts from the stock Alternator cover, shown as position Bolt 1, 2 & 3.
- 3 Place the Secondary Alternator Cover over the stock cover.
- 4 Assemble 3 replacement bolts loosely in the correct position as shown.
- 5 Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations.  
DO NOT OVERTIGHTEN.

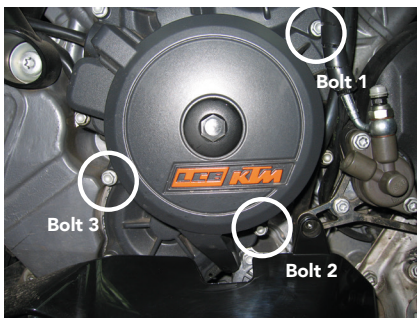




**SECONDARY CLUTCH COVER**  
**PART NO. EC-RC8-2008-2-GBR**

- 1 Remove 3 existing bolts from the stock Clutch cover, shown as position Bolt 1, 2 & 3.
- 2 Place the Secondary Clutch Cover over the stock cover.
- 3 Assemble 3 replacement bolts loosely in the correct position as shown.  
*Note. 100mm to the top, 95mm to the bottom left.*
- 4 Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations.  
DO NOT OVERTIGHTEN.

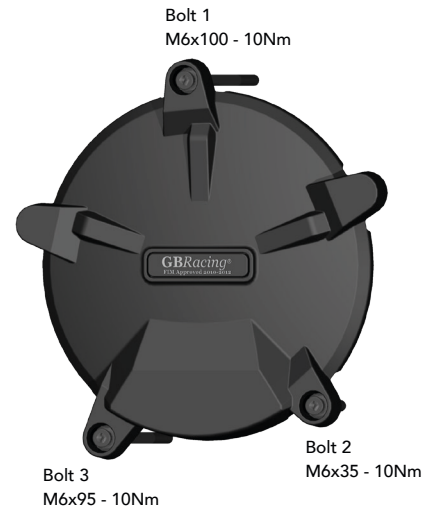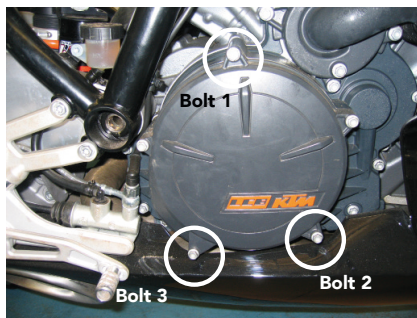



**FRAME SLIDER RIGHT HAND SIDE**  
**PART NO. CP-RC8-2008-RHS-GBR**

- 1 Remove 2 existing bolts, shown above at Bolt positions 1 & 2.  
*Note:- Remove aluminium spacer bush at Bolt position 1.*
- 2 Place the Black Anodised Bracket into position, assemble using 2 off supplied M10 x 55 Zinc plated 12.9 Steel Bolts.
- 3 Tighten bolts to a Torque of 48Nm as per Manufacturer's recommendations. **DO NOT OVERTIGHTEN.**
- 4 Assemble the CPF1-GBR mushroom with the supplied M10 x 65 A2 Stainless Steel Bolt. Tighten to 25 Nm.

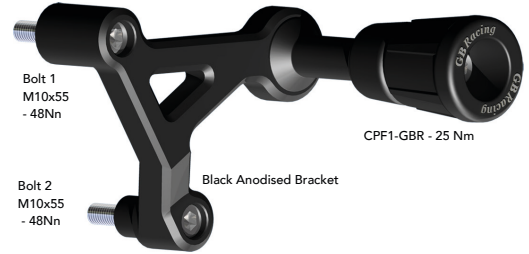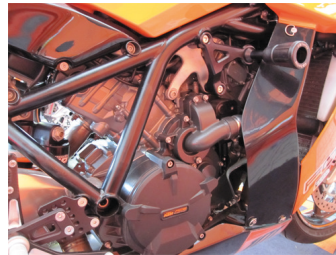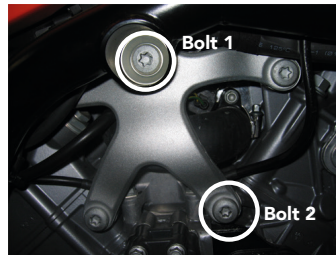

**FRAME SLIDER LEFT HAND SIDE**  
**PART NO. CP-RC8-2008-LHS-GBR**

- 1 Remove 2 existing bolts, shown above at Bolt positions 1 & 2.  
*Note:- Remove aluminium spacer bush at Bolt position 1.*
- 2 Place the Black Anodised Bracket into position, assemble using 2 off supplied M10 x 55 Zinc plated 12.9 Steel Bolts.
- 3 Tighten bolts to a Torque of 48Nm as per Manufacturer's recommendations. **DO NOT OVERTIGHTEN.**
- 4 Assemble the CPF1-GBR mushroom with the supplied M10 x 65 A2 Stainless Steel Bolt. Tighten to 25 Nm.

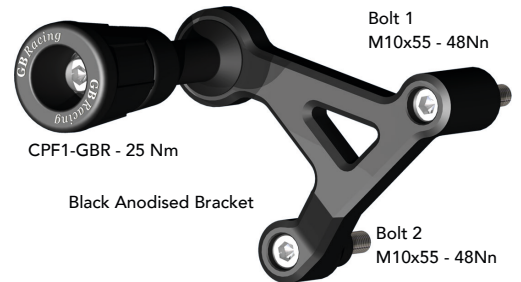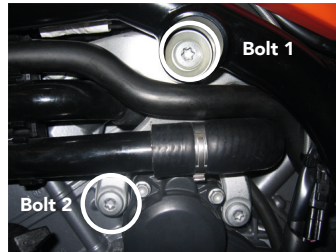

**PADDOCK STAND / BOBBIN SET**  
**PART NO. BA12-8-GBR-SET**

- 1 Assemble M8 x 40mm Bolt through the moulded bobbin.
- 2 Tighten bolts to swing arm boss, 8 Nm.  
**DO NOT OVERTIGHTEN**

1 x M8 x 40 Bolt



1 x Moulded Paddock Stand / Bobbin



**Protection Bundle: CP-RC8-2008-CS-GBR**

EC-RC8-2008-1-GBR, EC-RC8-2008-2-GBR, CP-RC8-2008-SET-GBR, BA12-8-GBR-SET

**Engine Cover Set: EC-RC8-2008-SET-GBR**

EC-RC8-2008-1-GBR, EC-RC8-2008-2-GBR