



FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN

SPINDLE PROTECTORS

SPINDLE PROTECTOR – FITTING INSTRUCTIONS

- 1 Assemble the spindle protector as shown.
- 2 Insert into the spindle and tighten till solid (we recommend approximately 8Nm).

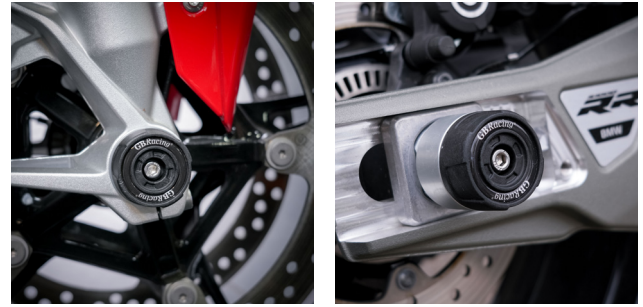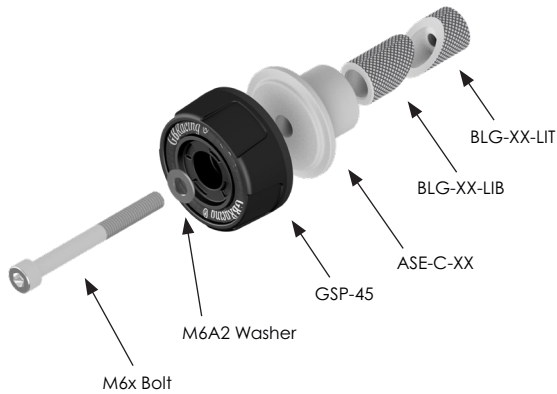

MODEL FITMENT LIST:

- **BMW S1000RR, R, XR & M1000RR, R, XR, 2019-2025**

Please note, on the 2025 BMW S1000RR and M1000RR with integrated nose cone and brake scoop, the front right spindle protector does not fit without slightly dremelling the underside of the brake scoop.

SET: GSP-S1000RR-2025-SET | Front LHS: GSP-24-14-60 | Front RHS: GSP-25-22-65 | Rear LHS: GSP-22-16-45 | Rear RHS: GSP-23-22-80

- **Yamaha R1 & R1M, 2015-2025**

SET: GSP-R1-2024-SET | Front LHS: GSP-29-14-50 | Front RHS: GSP-30-18-80 | Rear LHS: GSP-23-22-80 | Rear RHS: GSP-22-16-45

- **Suzuki GSXR600 K4-K5**

SET: GSP-GSXR600-K4-SET | Front LHS: GSP-20-14-60 | Front RHS: GSP-21-22-60 | Rear LHS: GSP-22-16-45 | Rear RHS: GSP-23-22-80

- **Ducati Panigale V4 & V4S, Streetfighter V4 & V4S, 2025**

SET: GSP-V4S-2025-SET | Front LHS: GSP-26-30-60 | Front RHS: GSP-27-20-70 | Rear LHS: GSP-28-18-80 | Rear RHS: GSP-29-14-50

- **Ducati Monster, Monster SP, 2022-2025 & Hypermotard 698, 2024-2025**

SET: GSP-698-2024-SET | Front LHS: GSP-26-30-60 | Front RHS: GSP-27-20-70