



THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-CB1000R-2018-1-GBR / Secondary Clutch Cover Part No. EC-CB1000R-2018-2-GBR /
Secondary Pulse Cover Part No. EC-CB1000R-2018-3-GBR




SECONDARY ALTERNATOR COVER
PART NO. EC-CB1000R-2018-1-GBR

1. Remove 4 existing bolts from the stock Alternator cover, shown as position Bolt 1, 2, 3 & 4.
2. Place the Secondary Alternator Cover over the stock cover.
3. Assemble 4 replacement bolts (**M6X40HHF**) loosely in the correct position as shown.
4. Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations. **DO NOT OVERTIGHTEN.**

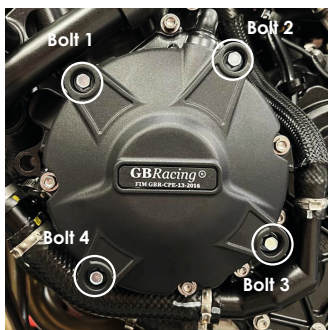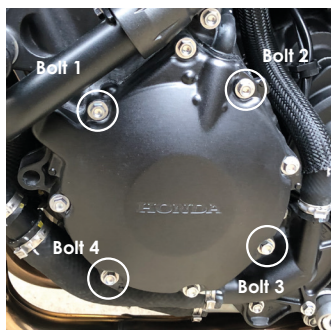

Bolt 1
M6X40HHF - 10Nm
SPB-6

Bolt 2
M6X40HHF - 10Nm
SPB-6


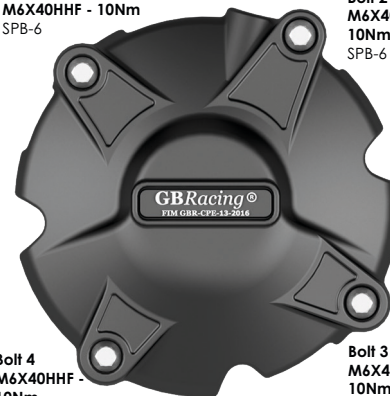


Bolt 4
M6X40HHF - 10Nm
SPB-6

Bolt 3
M6X40HHF - 10Nm
SPB-6

SECONDARY CLUTCH COVER
PART NO. EC-CB1000R-2018-2-GBR

1. Remove 4 existing bolts from the stock Clutch cover, shown as position Bolt 1, 2, 3 & 4.
2. Place the Secondary Clutch Cover over the stock cover.
3. Assemble 4 replacement bolts (**M6X40HHF**) loosely in the correct position as shown.
4. Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations. **DO NOT OVERTIGHTEN.**

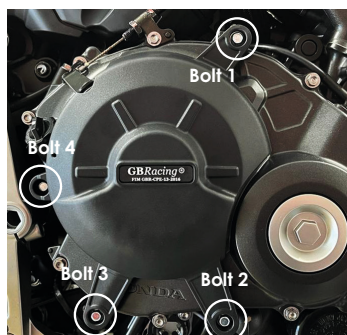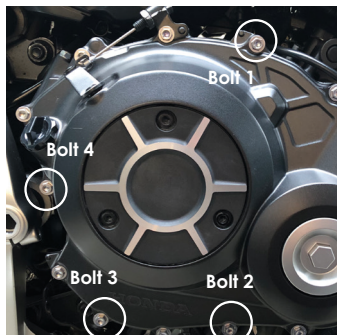

Bolt 1
M6X40HHF - 10Nm
SPB-6

Bolt 4
M6X40HHF - 10Nm
SPB-11


Bolt 3
M6X40HHF - 10Nm
SPB-6

Bolt 2
M6X40HHF - 10Nm
SPB-6




SECONDARY PULSE COVER
PART NO. EC-CB1000R-2018-3-GBR

1. Remove 3 existing bolts from the stock Pulse cover, shown as position Bolt 1, 2 & 3.
2. Place the Secondary Pulse Cover over the OEM stock cover.
3. Assemble the remaining 3 replacement bolts loosely in the correct position as shown.
4. Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations.

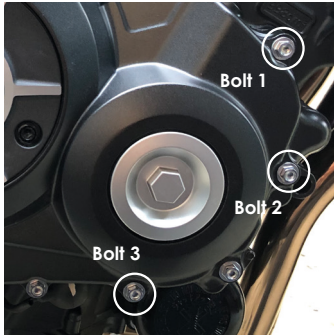

Bolt 1
M6X35HHF - 10Nm
SPB-4

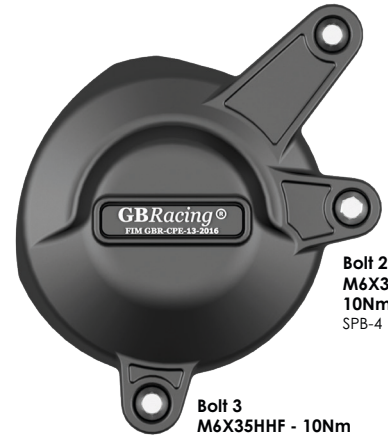

Bolt 2
M6X35HHF - 10Nm
SPB-4

Bolt 3
M6X35HHF - 10Nm
SPB-4