


THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-MT07-2014-1-GBR / Secondary Clutch Cover Part No. EC-MT07-2014-2-GBR




SECONDARY ALTERNATOR COVER
PART NO. EC-MT07-2014-1-GBR

1. Place your bike in an upright position when fitting the Alternator as you will lose a small amount of engine oil when you remove Bolt 3.
2. Remove 4 existing bolts from the stock Alternator cover, shown as position Bolt 1, 2, 3 & 4.
2. Place the Secondary Alternator Cover over the stock cover.
3. Assemble 4 replacement M6X50A2 bolts loosely in the correct position as shown.
4. Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations. DO NOT OVERTIGHTEN.

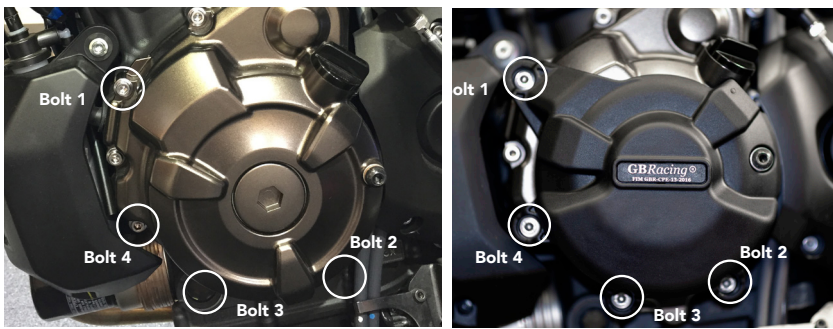

Bolt 1
M6X50A2 - 10Nm

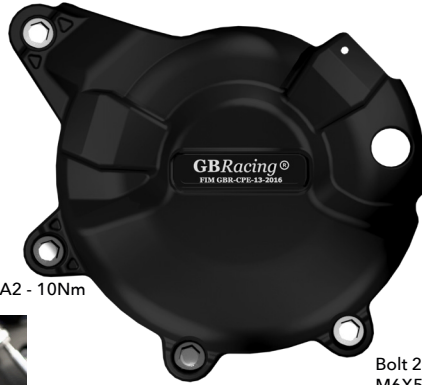

Bolt 4
M6X50A2 - 10Nm


Bolt 2
M6X50A2 - 10Nm

Bolt 3
M6X50A2 - 10Nm

SECONDARY CLUTCH COVER
PART NO. EC-MT07-2014-2-GBR

Please note: When fitting to the Yamaha Ténéré 700, please remove the small OE plastic cover before fitment.

1. Remove 4 existing bolts from the stock Clutch cover, shown as position Bolt 1, 2, 3 & 4.
2. Place the Secondary Clutch Cover over the stock cover.
3. Assemble 4 replacement bolts loosely in the correct positions as shown.
4. Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations. DO NOT OVERTIGHTEN.

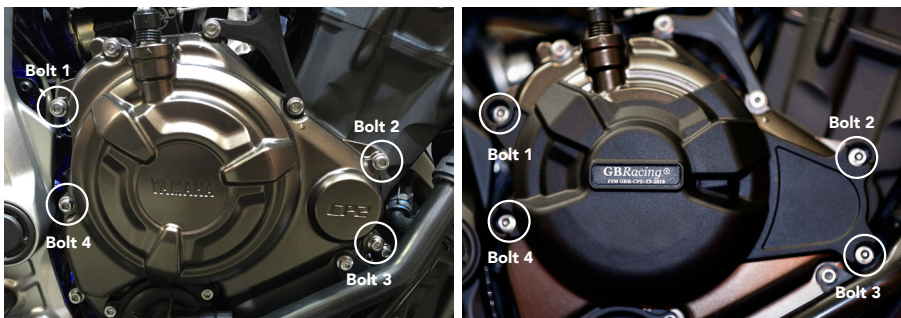

Bolt 1
M6X35A2 - 10Nm



Bolt 2
M6X35A2 - 10Nm

Bolt 4
M6X35A2 - 10Nm

Bolt 3
M6X35A2 - 10Nm

SET:

Engine Cover Set: EC-MT07-2014-SET-GBR

Secondary Alternator Cover Part No. EC-MT07-2014-1-GBR / Secondary Clutch Cover Part No. EC-MT07-2014-2-GBR

www.GBRacing.eu



FITS MT-07 TRACER MODEL ONLY:

PADDOCK STAND / BOBBIN SET
PART NO. BA12-6-GBR-SET

- 1 Assemble M6 x 40mm Bolt & M6 Washer for the right hand side through the moulded bobbin.
- 2 Assemble M6 x 50mm Bolt & M6 washer for the left hand side through the moulded bobbin. This is to allow for the refitment of the original lower chainguard.
- 3 Tighten bolts to swing arm boss, 8 Nm

