



THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-MT07-2025-1-GBR / Secondary Clutch Cover Part No. EC-MT07-2025-2-GBR /
Secondary Water Pump Cover Part No. EC-MT07-2025-5-GBR / Secondary Water Pipe Cover Part No. WPC-MT07-2025 /
Bullet Frame Sliders - Street - Part No. FS-MT07-2014-LHS-S, FS-MT07-2014-RHS-S / XL Bullet Frame Slider Set - Part No. FS-MT07-2014-XL /
Fixed Frame Mount Assembly Part No. FM8-GP-SET60 (Ténéré 700 model only)

PLEASE NOTE: For the YZF-R7 2026 remove fairing prior to fitment.

SECONDARY ALTERNATOR COVER – PART NO. EC-MT07-2025-1-GBR


1. Remove 3 existing bolts from the stock alternator cover, shown as position Bolt 1, 2 & 3.
2. Place the secondary alternator cover over the stock cover.
3. Assemble 3 replacement bolts loosely in the correct position as shown.
4. Tighten bolts to a torque of 10Nm as per manufacturer's recommendations. DO NOT OVERTIGHTEN.

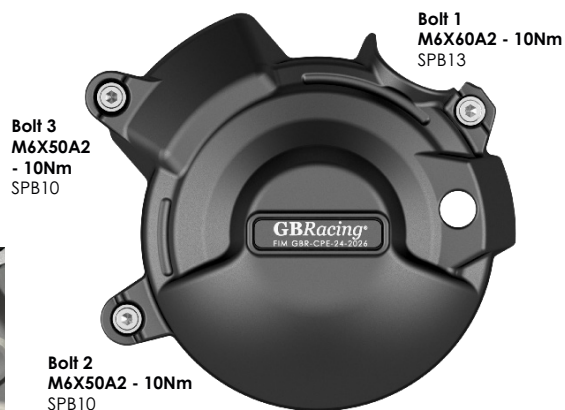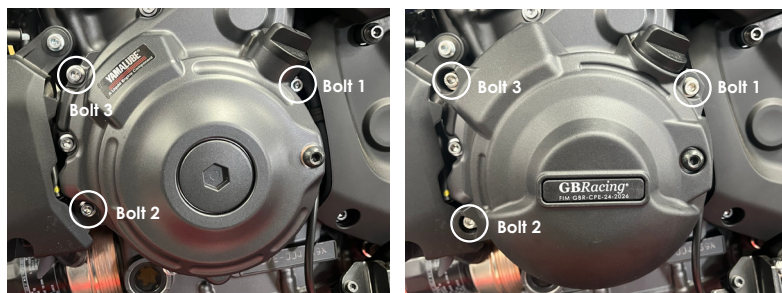

SECONDARY CLUTCH COVER PART NO. EC-MT07-2025-2-GBR

Please note: When fitting to Yamaha Tenere 700, please remove the small OE plastic cover before fitment and replace bolts with OE bolts from 1 and 4.

1. Remove 4 existing bolts from the stock clutch cover, shown as position bolt 1, 2, 3 & 4.
2. Place the secondary clutch cover over the stock cover.
3. Assemble 4 replacement bolts loosely in the correct positions as shown.
4. Tighten bolts to a torque of 10Nm as per manufacturer's recommendations. DO NOT OVERTIGHTEN.

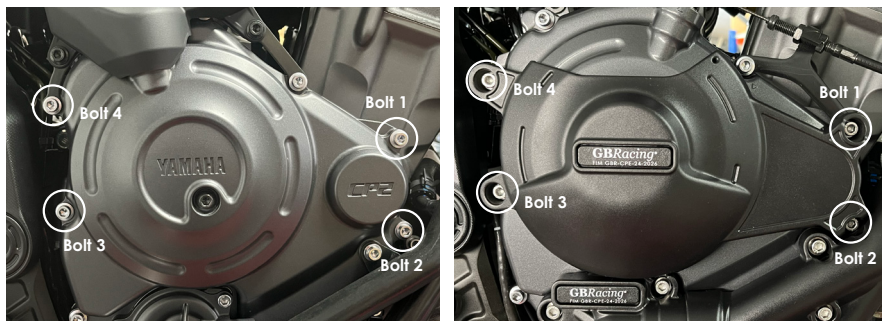



SET: Engine Cover Set: EC-MT07-2025-SET-GBR

Secondary Alternator Cover Part No. EC-MT07-2025-1-GBR / Secondary Clutch Cover Part No. EC-MT07-2025-2-GBR

SECONDARY WATER PUMP COVER – PART NO. EC-MT07-2025-5-GBR




Please note:

- Always fit with a cold engine.
 - Coolant may leak whilst fitting the protective cover, so prepare with a container underneath the bike.
1. Remove 3 existing bolts from the stock water pump cover, shown as position Bolt 1, 2 & 3.
 2. Place the secondary water pump cover over the stock cover.
 3. Assemble 3 replacement **M6X30A2** bolts loosely in the correct position as shown.
 4. Tighten bolts to a torque of 10Nm as per manufacturer's recommendations.
DO NOT OVERTIGHTEN.
 5. Check coolant levels.

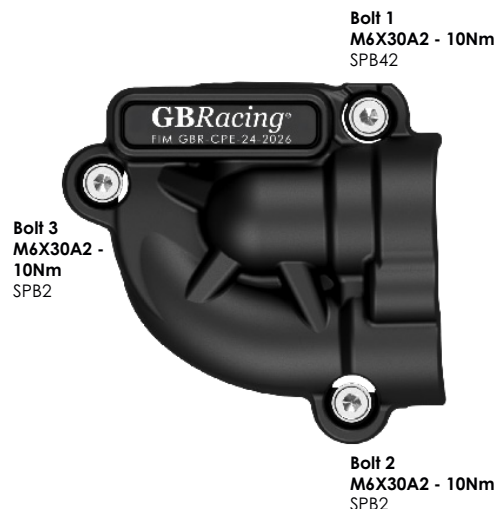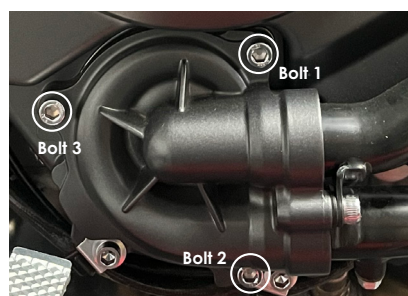

WATER PIPE COVER – PART NO. WPC-MT07-2025

1. Ensure engine is cold.
2. Remove 3 existing bolts from the correct locations.
3. Place the water pipe cover over the water pipes.
4. Assemble 3 replacement bolts from the stock water pipe cover, shown as position Bolt 1, 2 & 3.
5. Tighten bolts to a torque of 10Nm as per manufacturer's recommendations. DO NOT OVERTIGHTEN.

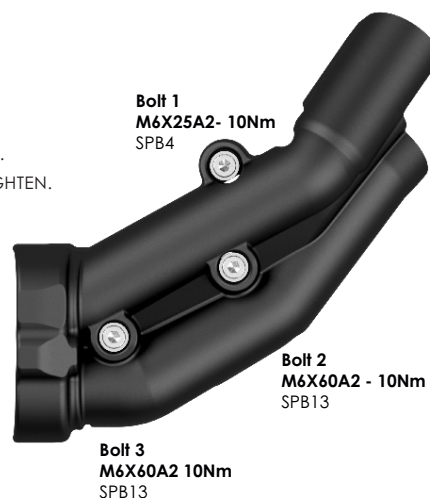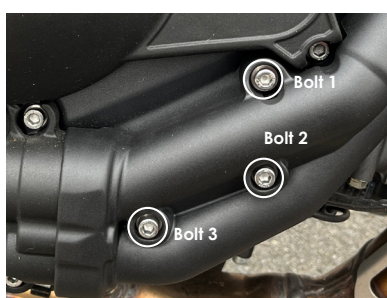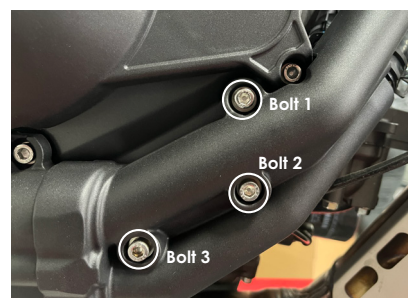

BULLET FRAME SLIDER - LEFT HAND SIDE - STREET

PART NO. FS-MT07-2014-LHS-S




INSTRUCTIONS FOR THESE PARTS:

1. Remove upper engine mounting bolt.
2. Assemble bolt through the aluminium bush into correct position.

BULLET FRAME SLIDER - RIGHT HAND SIDE - STREET

PART NO. FS-MT07-2014-RHS-S

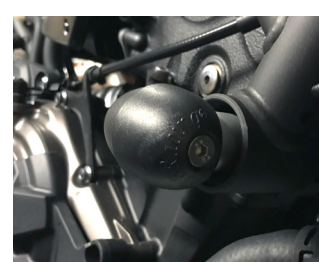

3. Tighten to 75NM torque.
4. Slide bullet moulding onto aluminium bush.
5. Screw M6 bolt into front of bullet moulding hand tight.

BULLET FRAME SLIDER - RIGHT HAND SIDE - STREET
– PART NO. FS-R7-2022-RHS-S

BULLET FRAME SLIDER - LEFT HAND SIDE - STREET
– PART NO. FS-R7-2022-LHS-S

Please note: when fitting the frame sliders to the R7, please reuse the OE washers from the engine mount bolts.





INSTRUCTIONS FOR THESE PARTS:

1. Remove front engine mounting bolt, located through the fairing opening.
2. Assemble bolt through the aluminium bush into correct position.
3. Tighten to 75NM torque.
4. Slide bullet moulding onto aluminium bush.
5. Screw M6 bolt into front of bullet moulding hand tight.

FIXED MOUNT ASSEMBLY FOR GoPro™ CAMERA –
PART NO. FM8-GP-SET60

THIS PART FITS TÉNÉRÉ 700 MODEL ONLY:

1. Remove lower OEM M8x23 black steel bolt from position 1- [see Fig.1](#)
2. Add the replacement M8X30 bolt into the CPB-8-60 black anodised aluminium bush - [see Fig.2](#), and tighten up with 'thread lock' against position 1. Torque to 34Nm.
3. Place the CPM-3-GP over the bush - see Fig.3, and fix with M6X10A2CSK screw.
4. Fix your Go Pro to the CPM-3-GP.

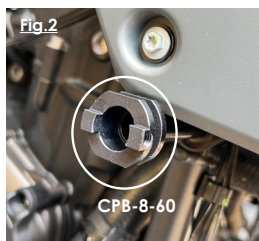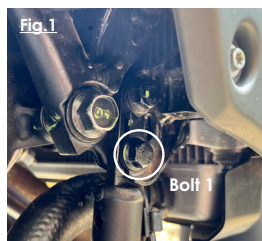

Street XL Bullet Frame Slider Set: Both sides

Part No. FS-MT07-2014-XL

1. Remove upper engine mounting bolt.
2. Assemble bolt through the aluminium bush into correct position.
3. Tighten to 75NM torque.
4. Slide bullet moulding onto aluminium bush.
5. Screw M6 bolt moulding hand tight.



Replacement Bullet Moulded Part

Part No. CPM-6

