



**MT-07, MT-07 AMT,
TÉNÉRÉ 700, 700 Rally
2025-2026**

FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN





THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-MT07-2025-1-GBR / Secondary Clutch Cover Part No. EC-MT07-2025-2-GBR / Secondary Water Pump Cover Part No. EC-MT07-2025-5-GBR / Secondary Water Pipe Cover Part No. WPC-MT07-2025 / Bullet Frame Sliders - Street - Part No. FS-MT07-2014-LHS-S, FS-MT07-2014-RHS-S / XL Bullet Frame Slider Set - Part No. FS-MT07-2014-XL / Fixed Frame Mount Assembly Part No. FM8-CP-SET60 (Ténéré 700 model only)

SECONDARY ALTERNATOR COVER – PART NO. EC-MT07-2025-1-GBR


1. Remove 3 existing bolts from the stock alternator cover, shown as position Bolt 1, 2 & 3.
2. Place the secondary alternator cover over the stock cover.
3. Assemble 3 replacement bolts loosely in the correct position as shown.
4. Tighten bolts to a torque of 10Nm as per manufacturer's recommendations. DO NOT OVERTIGHTEN.

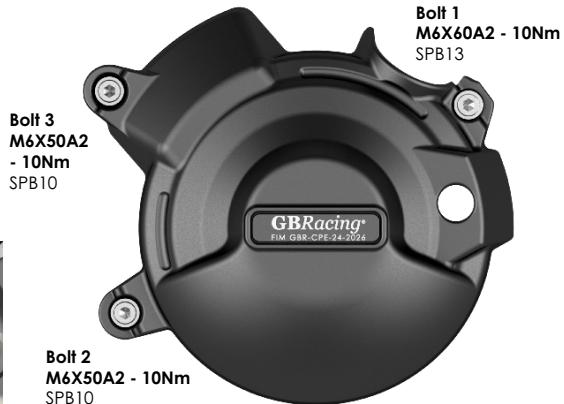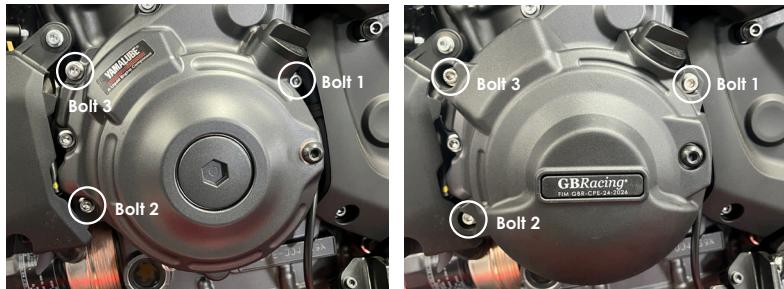

SECONDARY CLUTCH COVER PART NO. EC-MT07-2025-2-GBR

Please note: When fitting to Yamaha Tenere 700, please remove the small OE plastic cover before fitment and replace bolts with OE bolts from 1 and 4.

1. Remove 4 existing bolts from the stock clutch cover, shown as position bolt 1, 2, 3 & 4.
2. Place the secondary clutch cover over the stock cover.
3. Assemble 4 replacement bolts loosely in the correct positions as shown.
4. Tighten bolts to a torque of 10Nm as per manufacturer's recommendations. DO NOT OVERTIGHTEN.

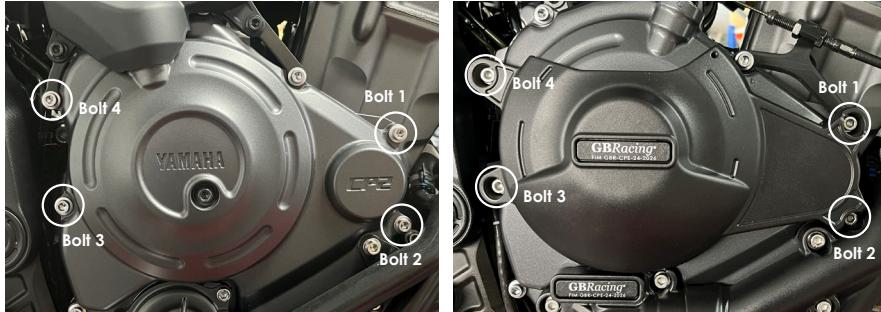

SET: Engine Cover Set: EC-MT07-2025-SET-GBR


Secondary Alternator Cover Part No. EC-MT07-2025-1-GBR / Secondary Clutch Cover Part No. EC-MT07-2025-2-GBR

SECONDARY WATER PUMP COVER – PART NO. EC-MT07-2025-5-GBR

Please note:

- Always fit with a *cold engine*.
- Coolant may leak whilst fitting the protective cover, so prepare with a container underneath the bike.

1. Remove 3 existing bolts from the stock water pump cover, shown as position Bolt 1, 2 & 3.
2. Place the secondary water pump cover over the stock cover.
3. Assemble 3 replacement **M6X30A2** bolts loosely in the correct position as shown.
4. Tighten bolts to a torque of 10Nm as per manufacturer's recommendations.
DO NOT OVERTIGHTEN.
5. Check coolant levels.


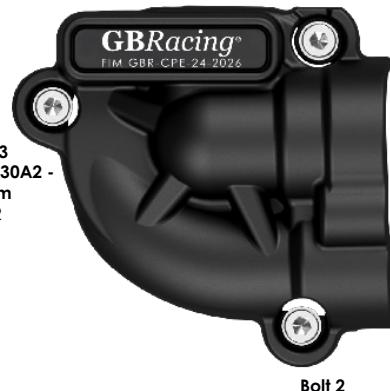


Bolt 2
M6X30A2 - 10Nm
SPB2

Bolt 3
M6X30A2 - 10Nm
SPB2

WATER PIPE COVER – PART NO. WPC-MT07-2025

1. Ensure engine is cold.
2. Remove 3 existing bolts from the correct locations.
3. Place the water pipe cover over the water pipes.
4. Assemble 3 replacement bolts from the stock water pipe cover, shown as position Bolt 1, 2 & 3.
5. Tighten bolts to a torque of 10Nm as per manufacturer's recommendations. DO NOT OVERTIGHTEN.

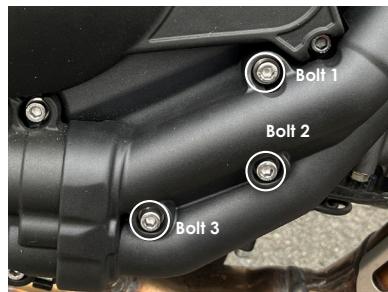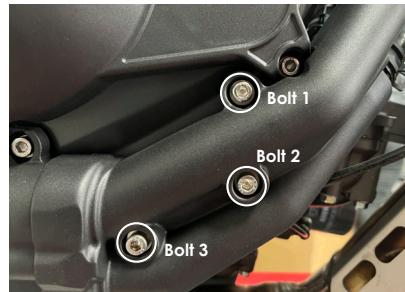


Bolt 2
M6X60A2 - 10Nm
SPB13

Bolt 3
M6X60A2 10Nm
SPB13

BULLET FRAME SLIDER - LEFT HAND SIDE - STREET
PART NO. FS-MT07-2014-LHS-S

INSTRUCTIONS FOR THESE PARTS:

1. Remove upper engine mounting bolt.
2. Assemble bolt through the aluminium bush into correct position.

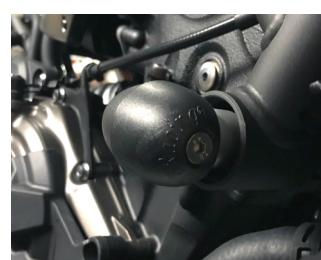BULLET FRAME SLIDER - RIGHT HAND SIDE - STREET
PART NO. FS-MT07-2014-RHS-S


3. Tighten to 60NM torque.
4. Slide bullet moulding onto aluminium bush.
5. Screw M6 bolt into front of bullet moulding hand tight.



**MT-07, MT-07 AMT,
TÉNÉRÉ 700, 700 Rally
2025-2026**

FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN




FIXED MOUNT ASSEMBLY FOR GoPro™ CAMERA –

PART NO. FM8-GP-SET60

THIS PART FITS TÉNÉRÉ 700 MODEL ONLY:

- 1 Remove lower OEM M8x23 black steel bolt from position 1- see Fig.1
- 2 Add the replacement M8X30 bolt into the CPB-8-60 black anodised aluminium bush - see Fig.2, and tighten up with 'thread lock' against position 1. Torque to 34Nm.
- 3 Place the CPM-3-GP over the bush - see Fig.3, and fix with M6X10A2CSK screw.
- 4 Fix your Go Pro to the CPM-3-GP.

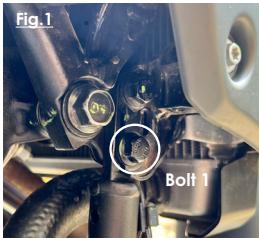

Street XL Bullet Frame Slider Set: Both sides

Part No. FS-MT07-2014-XL

- 1 Remove upper engine mounting bolt.
- 2 Assemble bolt through the aluminium bush into correct position.
- 3 Tighten to 60NM torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt moulding hand tight.



Replacement Bullet Moulded Part

Part No. CPM-6

