## FITTING INSTRUCTIONS


TO BE FITTED BY A QUALIFIED TECHNICIAN





## SPINDLE PROTECTOR - FITTING INSTRUCTIONS

- 1 Assemble the spindle protector as shown.
- 2 Insert into the spindle and tighten till solid (we recommend approximately 8Nm).

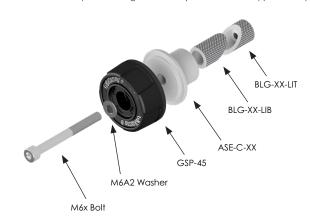





## **MODEL FITMENT LIST:**

BMW \$1000RR, R, XR & M1000RR, R, XR, 2019-2025 (See website for model fitment)

Please note, on the 2025 BMW \$1000RR and M1000RR with integrated nose cone and brake scoop, the front right spindle protector does not fit without slightly dremelling the underside of the brake scoop.

Yamaha R1 & R1M, 2015-2025 (See website for model fitment)

SET: GSP-R1-2024-SET | Front LHS: GSP-29-14-50 | Front RHS: GSP-30-18-90 | Rear LHS: GSP-23-22-80 | Rear RHS: GSP-22-16-45

Suzuki GSXR600 K4-K5 (See website for model fitment)

Ducati Panigale V4 & V4S, Streetfighter V4 & V4S, 2025 (See website for model fitment)

SET: GSP-V4S-2025-SET | Front LHS: GSP-26-20-70 | Front RHS: GSP-27-30-70 | Rear LHS: GSP-28-18-80 | Rear RHS: GSP-29-14-50

Ducati Monster, Monster SP, 2022-2025 & Hypermotard 698, 2024-2025 (See website for model fitment)

**SET:** GSP-698-2024-SET | **Front LHS:** GSP-26-30-60 | **Front RHS:** GSP-27-20-70