

FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN

Street XL Bullet Frame Slider Set: Both sides

Part No. FS-CB1000R-2018-XL

- 1 Remove upper engine mounting bolt.
- 2 Assemble bolt through the aluminium bush into correct position.
- 3 Tighten to 60NM torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt moulding hand tight.

LEFT HAND SIDE

CPM-6

M6X10A2CSK

CPB-12-25-15

M12X1.25X75





RIGHT HAND SIDE

CPM-6

M6X10A2CSK

CPB-12-25-15

M12X1.25X60

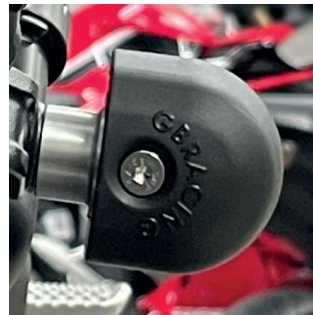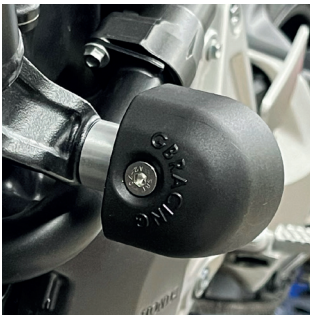

Replacement Bullet Moulded Part

Part No. CPM-6

