

THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:



Secondary Alternator Cover Part No. EC-RSV4-2010-1-GBR / Secondary Clutch Cover Part No. EC-RSV4-2010-2-GBR /
Bullet Frame Race Slider Set - RACE - Part No. FS-RSV4-2010-R

Please note: For the 2017 model onwards, the **alternator** and **clutch** have a standard dust cover fitted to brackets.
The fixing studs and brackets will need to be removed before fitting the GBRacing alternator / clutch cover. (For clutch: See Fig. 2 below).

SECONDARY ALTERNATOR COVER
PART NO. EC-RSV4-2010-1-GBR

Fits 2010-2020 models only. Alternator cover does not fit 2021 model

- 1 Remove 4 existing bolts from the stock Alternator cover, shown as position Bolt 1, 2 3 & 4.
Retain stock bolt washers.
- 2 Place the Secondary Alternator Cover over the stock cover.
- 3 Assemble 4 replacement bolts, reuse stock bolt washers, loosely in the correct position as shown.
The retained stock washers are fitted between the engine casing and the GBRacing cover - See Fig. 1.

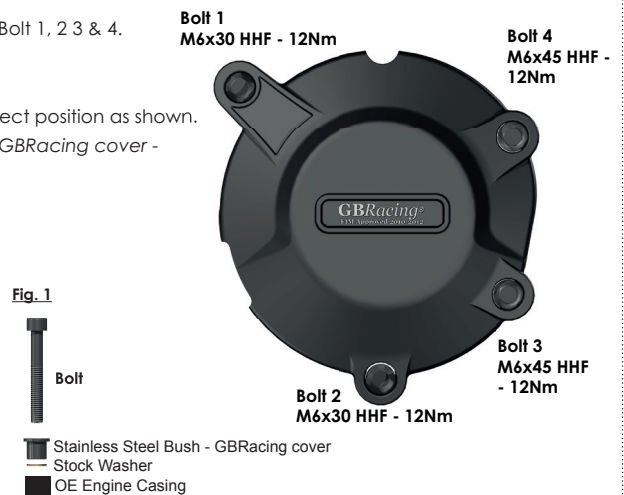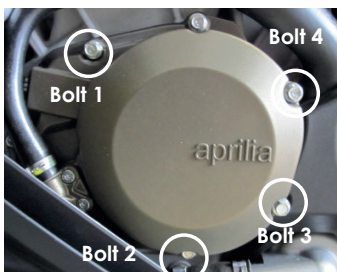

SECONDARY CLUTCH COVER
PART NO. EC-RSV4-2010-2-GBR

See note at top of page re dust cover

- 1 Remove 3 existing bolts from the stock Clutch cover, shown as position Bolt 1, 2 & 3. Retain stock bolt washers.
- 2 Place the Secondary Clutch Cover over the stock cover.
- 3 Assemble 3 replacement bolts, reuse stock bolt washers loosely in the correct position as shown. *The retained stock washers are fitted between the engine casing and the GBRacing cover - See Fig. 1.*
- 4 Tighten bolts to a Torque of 12Nm as per Manufacturer's recommendations. DO NOT OVERTIGHTEN.


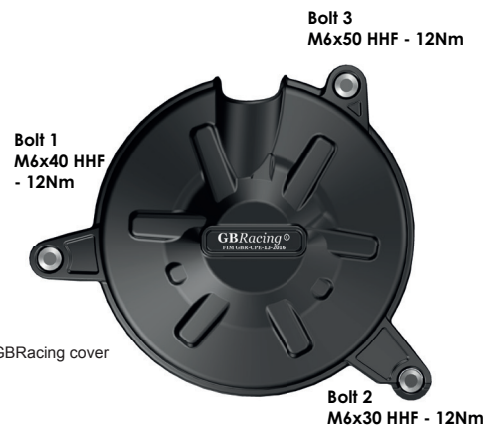


Fig 2



BULLET FRAME SLIDER - LEFT HAND SIDE - RACE
PART NO. FS-RSV4-2010-LHS-R

- 1 Remove upper engine mounting bolt, located through the fairing opening.
- 2 Assemble bolt through the aluminium bush into correct position.
- 3 Tighten to 50Nm torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt into front of bullet moulding hand tight.

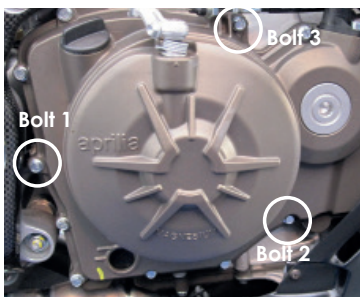

BULLET FRAME SLIDER - RIGHT HAND SIDE - RACE
PART NO. FS-RSV4-2010-RHS-R

- 1 Remove upper engine mounting bolt, located through the fairing opening.
- 2 Assemble bolt through the aluminium bush into correct position.
- 3 Tighten to 50Nm torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt into front of bullet moulding hand tight.



ALSO FITS THIS MODEL

PADDOCK STAND BOBBIN	BA12-6-RSV4-GBR-SET
BRAKE LEVER GUARD	BLG-M18-S15-A160-GBR (RSV4 2009-2024)
CLUTCH LEVER GUARD	CLG-M18-S15-A160-GBR (RSV4 2009-2024)
BRAKE LEVER GUARD	BLG-M18-S10-A160-GBR (TUONO V4 2011-2024)
CLUTCH LEVER GUARD	CLG-M18-S10-A160-GBR (TUONO V4 2011-2024)

SETS & BUNDLES

SET: EC-RSV4-2010-SET-GBR: EC-RSV4-2010-1-GBR / EC-RSV4-2010-2-GBR **(2010-2020 models only)**

BUNDLE: CP-RSV4-2010-CS-GBR: EC-RSV4-2010-1-GBR / EC-RSV4-2010-2-GBR / BA12-6-RSV4-GBR-SET **(2010-2020 models only)**