

FITTING INSTRUCTIONS TO BE FITTED BY A QUALIFIED TECHNICIAN

Original Copper Crush Washer

New supplied Copper Crush

St. S. Bush




THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-1190RX-2014-1-GBR / Secondary Clutch Cover Part No. EC--1190RX-2014-2-GBR

SECONDARY ALTERNATOR COVER PART NO. EC-1190RX-2014-1-GBR

- 1 Remove the left hand side fairing panel.
- 2 Remove the 4 standard bolts as shown in Fig 1.
- 3 Place the secondary alternator cover against the standard alternator.
- 4 Place the copper washer on to the the thread of Bolt 1 and insert bolt into cover. Then put the new supplied copper washer on to the thread of the bolt so that it is in the correct order as per <u>Fig. 2</u>.
- 5 Insert the 3 remaining supplied bolts and tighten to 10Nm as per Manufacturer's recommendations.
 DO NOT OVERTIGHTEN.
- 6 Replace the left hand side fairing panel.

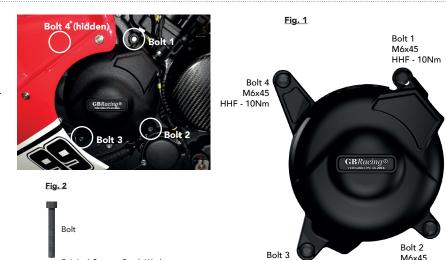

M6x45

HHF - 10Nm

HHF - 10Nm

SECONDARY CLUTCH COVER PART NO. EC-1190RX-2014-2-GBR

- Remove the right hand side fairing panel.
- 2 Remove the 4 standard bolts as per Fig. 1.
- 3 Place the secondary alternator cover against the standard alternator.
- 4 Insert the 4 supplied bolts and tighten to 10Nm as per Manufacturer's recommendations. DO NOT OVERTIGHTEN
- 5 Replace the right hand side fairing panel.



www.**GB**Racing.eu

Engine Cover Set: EC-1190RX-2014-SET-GBR

EC-1190RX-2014-1-GBR, EC-1190RX-2014-2-GBR