

THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:


Secondary Alternator Cover Part No. EC-MT07-2014-1-GBR / Secondary Clutch Cover Part No. EC-MT07-2014-2-GBR /  
 Secondary Water Pump Cover Part No. EC-MT07-2014-5-GBR



**SECONDARY ALTERNATOR COVER**  
**PART NO. EC-MT07-2014-1-GBR**

1. Place your bike in an upright position when fitting the Alternator as you will lose a small amount of engine oil when you remove **Bolt 3**.
2. Remove 4 existing bolts from the stock Alternator cover, shown as position Bolt 1, 2, 3 & 4.
2. Place the Secondary Alternator Cover over the stock cover.
3. Assemble 4 replacement **M6X50A2** bolts loosely in the correct position as shown.
4. Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations. **DO NOT OVERTIGHTEN.**



**Bolt 1**  
**M6X50A2 - 10Nm**

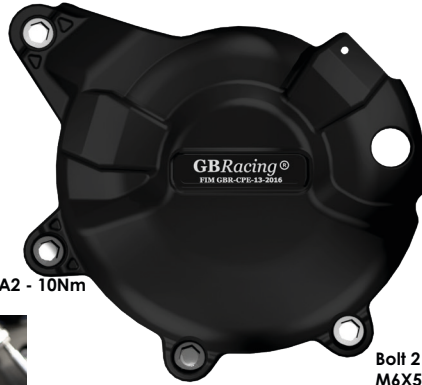

**Bolt 4**  
**M6X50A2 - 10Nm**

**Bolt 2**  
**M6X50A2 - 10Nm**

**Bolt 3**  
**M6X50A2 - 10Nm**

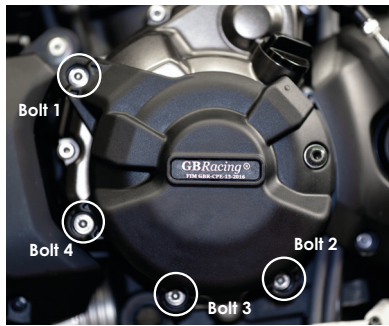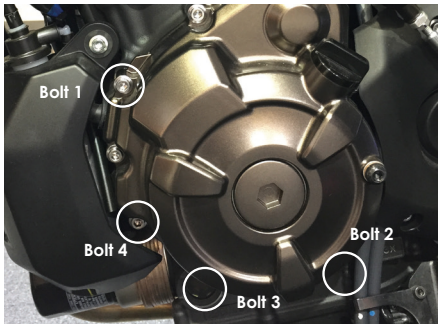

**SECONDARY CLUTCH COVER**  
**PART NO. EC-MT07-2014-2-GBR**

**Please note: When fitting to the Yamaha Ténéré 700, please remove the small OE plastic cover before fitment.**

1. Remove 4 existing bolts from the stock Clutch cover, shown as position Bolt 1, 2, 3 & 4.
2. Place the Secondary Clutch Cover over the stock cover.
3. Assemble 4 replacement bolts loosely in the correct positions as shown.
4. Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations. **DO NOT OVERTIGHTEN.**



**Bolt 1**  
**M6X35A2 - 10Nm**



**Bolt 2**  
**M6X35A2 - 10Nm**

**Bolt 4**  
**M6X35A2 - 10Nm**

**Bolt 3**  
**M6X35A2 - 10Nm**

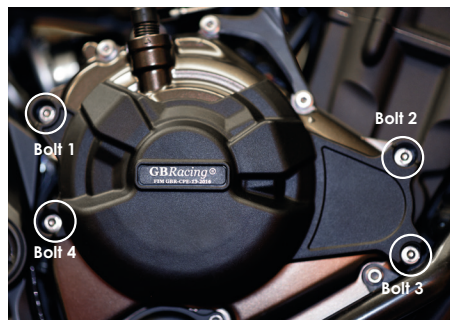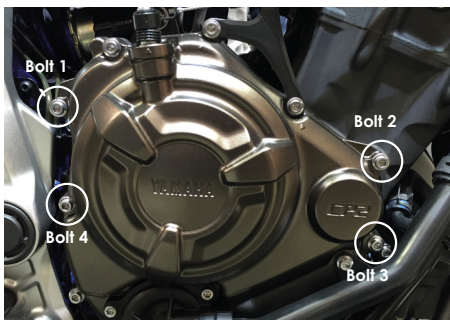

SET:

**Engine Cover Set: EC-MT07-2014-SET-GBR**

Secondary Alternator Cover Part No. EC-MT07-2014-1-GBR / Secondary Clutch Cover Part No. EC-MT07-2014-2-GBR




[www.GBRacing.eu](http://www.GBRacing.eu)

DO NOT use these products unless you agree to our Terms & Conditions, as shown on our paperwork and website. If you do not agree, please return the product(s) to your dealer for a refund.

**SECONDARY WATER PUMP COVER**  
**PART NO. EC-MT07-2014-5-GBR**

Please note:

- Always fit with a *cold engine*.
  - Coolant may leak whilst fitting the protective cover, so prepare with a container underneath the bike.
1. Remove 3 existing bolts from the stock water pump cover, shown as position Bolt 1, 2 & 3.
  2. Place the Secondary water pump cover over the stock cover.
  3. Assemble 3 replacement **M6X25A2** bolts loosely in the correct position as shown.
  4. Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations. **DO NOT OVERTIGHTEN.**
  5. Check coolant levels.

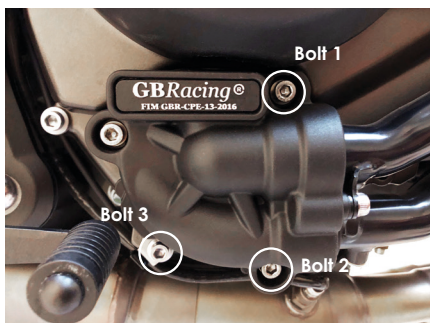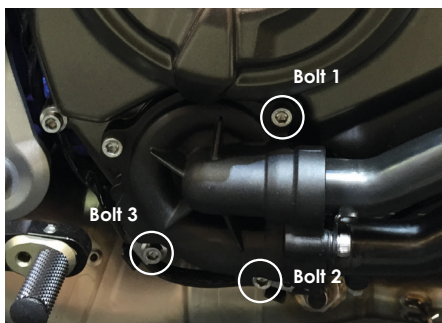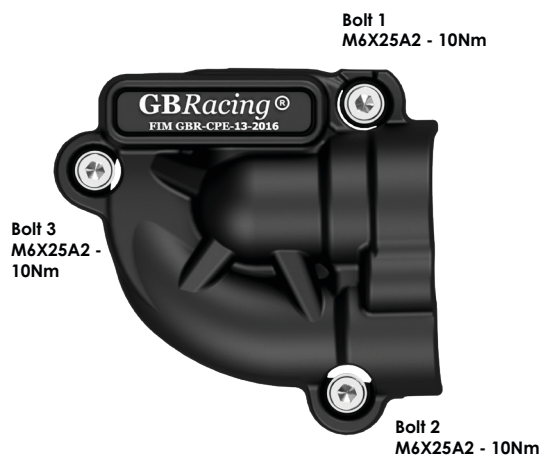

**FITS MT-07 TRACER MODEL ONLY:**

**PADDOCK STAND / BOBBIN SET**  
**PART NO. BA12-6-GBR-SET**

- 1 Assemble M6 x 40mm Bolt & M6 Washer through the moulded bobbin.
- 2 Tighten bolts to swing arm boss, 8 Nm.  
**DO NOT OVERTIGHTEN**

