

THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-ZX-25R-2020-1-GBR /


Secondary Clutch Cover Part No. EC-ZX-25R-2020-2-GBR /

Secondary Pulse Cover Part No. EC-ZX-25R-2020-3-GBR /

Bullet Frame Sliders Part No. FS-ZX-25R-2020-LHS-S & FS-ZX-25R-2020-RHS-S

SECONDARY ALTERNATOR COVER
PART NO. EC-ZX-25R-2020-1-GBR

1. Remove lower fairing panel.
2. Remove 4 existing bolts from the stock Alternator cover, shown as position Bolt 1, 2, 3 & 4.
3. Place the Secondary Alternator Cover over the stock cover.
4. Assemble 4 replacement bolts loosely in the correct position as shown.
5. Tighten bolts to a Torque of 11Nm as per manufacturer's recommendations. **DO NOT OVERTIGHTEN.**
6. Re-fit lower fairing panel.

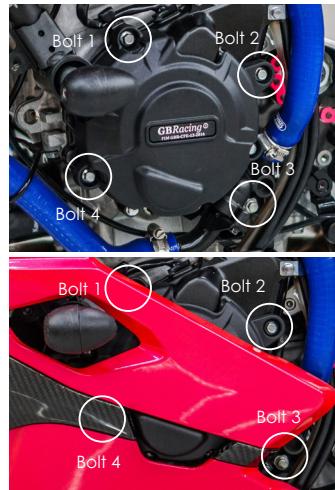

Bolt 1
M6X35HHF - 11Nm


Bolt 2
M6X35HHF - 11Nm

Bolt 3
M6X35HHF - 11Nm

Bolt 4
M6X35HHF - 11Nm

SECONDARY CLUTCH COVER
PART NO. EC-ZX-25R-2020-2-GBR

1. Remove lower fairing panel.
2. Remove 4 existing bolts from the Clutch cover, shown as position Bolt 1, 2, 3 & 4.
3. Place the Secondary Clutch Cover over the stock cover.
4. Assemble 4 replacement bolts loosely in the correct position as shown.
5. Tighten bolts to a Torque of 11Nm as per manufacturer's recommendations. **DO NOT OVERTIGHTEN.**
6. Re-fit lower fairing panel.

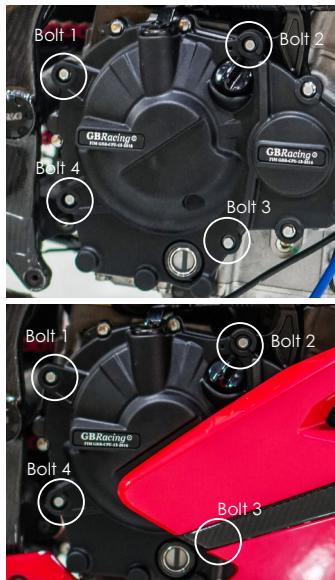

Bolt 1
M6X30HHF - 11Nm

Bolt 2
M6X30HHF - 11Nm


Bolt 3
M6X30HHF - 11Nm

Bolt 4
M6X30HHF - 11Nm

SECONDARY PULSE COVER
PART NO. EC-ZX-25R-2020-3-GBR

1. Remove lower fairing panel.
2. Remove 3 existing bolts from the Pulse cover, shown as position Bolt 1, 2 & 3.
3. Place the Secondary Pulse Cover over the stock cover.
4. Assemble 3 replacement bolts loosely in the correct position as shown.
5. Tighten bolts to a Torque of 11Nm as per manufacturer's recommendations.
6. Re-fit lower fairing panel.

DO NOT OVERTIGHTEN.

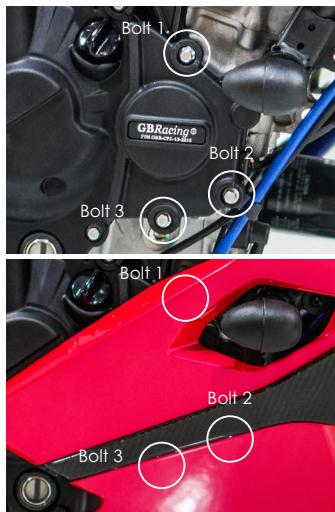

Bolt 1
M6X30HHF - 11Nm

Bolt 2
M6X30HHF - 11Nm

Bolt 3
M6X30HHF - 11Nm

BULLET FRAME SLIDER SET - PART NO. FS-ZX-25R-2020-S:**BULLET FRAME SLIDER - LEFT HAND SIDE - STREET**
PART NO. FS-ZX-25R-2020-LHS-S

- 1 Remove upper engine mounting bolt, located through the fairing opening.
- 2 Assemble bolt through the aluminium bush into correct position.
- 3 Tighten to 40NM torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt into front of bullet moulding hand tight.



CPM-3
M6x10A2CSK

CPB-10-25-65

M10x1.25x65

BULLET FRAME SLIDER - RIGHT HAND SIDE - STREET
PART NO. FS-ZX-25R-2020-RHS-S

- 1 Remove upper engine mounting bolt, located through the fairing opening.
- 2 Assemble bolt through the aluminium bush into correct position.
- 3 Tighten to 40NM torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt into front of bullet moulding hand tight.



CPM-3
M6x10A2CSK

CPB-10-25-30

M10x1.25x90

ALSO FITS THIS MODEL**UNIVERSAL LOWER CHAIN GUARD ASSEMBLY** CGA18-GBR-SET**PADDOCK STAND / BOBBIN KIT** BA12-8-GBR-SET**REPLACEMENT MOULDED BULLET SLIDER** CPM-3
GOPRO CAMERA MOUNT CPM-3-GP**BRAKE LEVER GUARD,**
A160 MOULDED REPLACEMENT PART ONLY BLG-A160**CLUTCH LEVER GUARD,**
A160 MOULDED REPLACEMENT PART ONLY CLG-A160**BRAKE LEVER GUARD** BLG-M8-S5-B5-R6-A160-GBR
CLUTCH LEVER GUARD CLG-M8-S5-B5-R6-A160-GBR**XL BULLET SLIDERS** FS-ZX-25R-2020-XL