

STOCK 6mm


THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary STOCK Alternator Cover Part No. EC-D675-1-GBR / Secondary Clutch Cover Part No. EC-D675-2-GBR / Secondary Pulse Cover Part No. EC-D675-3-GBR / Bullet Frame Race Slider Set - STREET - Part No. FS-675-2006-CS-S / Replacement Bullet Frame Slider Set - STREET - Part No. FS-675-2006-S / Replacement Bullet Frame Slider Set - RACE - Part No. FS-675-2006-R / Bobbin Set Part No. BA12-6-GBR-SET / Lower Chain Guard Part No. CGA06-GBR / Front Spindle Protectors Part No. BA-675-SET-GBR / Brake Lever Guard Part No. BLG-16-A160-GBR (Daytona 675 only) / Clutch Lever Guard Part No. CLG-16-A160-GBR (Daytona 675 only)



SECONDARY ALTERNATOR COVER - **STOCK** - PART NO. EC-D675-1-GBR


- 1 Remove 4 off existing Bolts on the stock aluminium Alternator cover that correspond to the Secondary Alternator Cover.
- 2 Place the Secondary Alternator Cover over the stock aluminium alternator cover.
- 3 Loosely assemble M6x30 Bolts 1, 2, 3 & 4 in an anti clockwise direction, starting at Bolt Position 1.
- 4 Tighten all 4 bolts to a torque of 8 N/m as per manufacturer's recommendations.
DO NOT OVERTIGHTEN

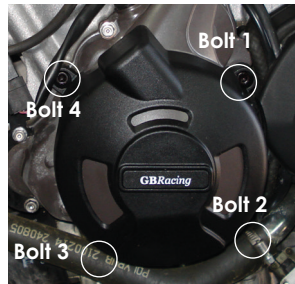

SECONDARY CLUTCH COVER PART NO. EC-D675-2-GBR



- 1 Remove 4 off existing Bolts on the stock aluminium Clutch cover that correspond to the Secondary Clutch Cover.
- 2 Place the Secondary Clutch Cover over the stock aluminium clutch cover.
- 3 Loosely assemble M6x30 Bolts 1, 2, 3 & 4 in an anti clockwise direction, starting at Bolt Position 1.
- 4 Tighten all 4 bolts to a torque of 8 N/m as per manufacturer's recommendations.
DO NOT OVERTIGHTEN

Note: You may need to bend the moulded arm at Bolt 4 to line up correctly

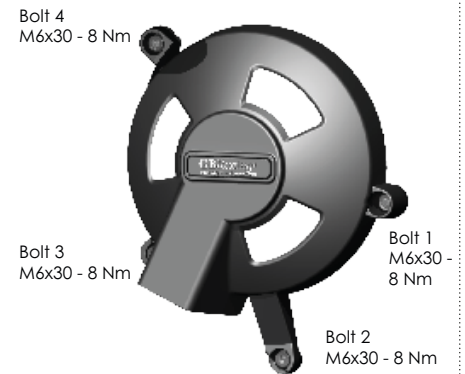


SECONDARY PULSE COVER PART NO. EC-D675-3-GBR

- 1 Remove 4 off existing Bolts at the base of the stock aluminium Pulse cover.
- 2 Place the Secondary Pulse Cover over the stock aluminium Pulse cover.
- 3 Loosely assemble the top 2 M6x30 Bolts 1&2 then assemble the bottom 2 M6x25 Bolts 3&4.
- 4 Tighten all 4 bolts to a torque of 8 N/m as per manufacturer's recommendations.
DO NOT OVERTIGHTEN

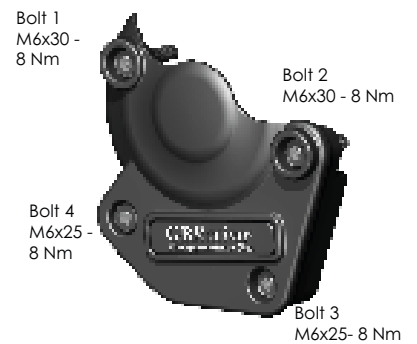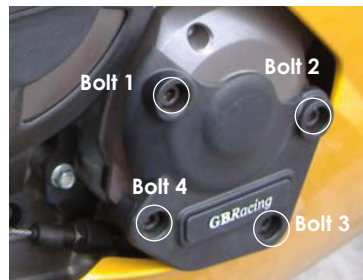

LOWER CHAIN GUARD PART NO. CGA06-GBR

- 1 Assemble 2 off M6 washers on to 2 off M6 x 20mm Bolts
- 2 Line up the Moulded Chain Guard to the Swing Arm bosses.
- 3 Assemble the M6 bolts through the 2 fixing holes on the aligned chain guard.
- 4 Assemble remaining 2 off M6 washers & M6 Lock Nuts onto the M6 bolts
DO NOT OVERTIGHTEN.

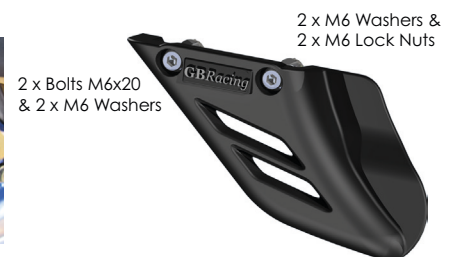

STOCK 6mm



BULLET FRAME SLIDER - LEFT HAND SIDE - STREET

PART NO. FS-675-2006-LHS-SET-S

1. Remove left side fairing
2. Unscrew engine bolts 1 & 2 as shown. Retain M10 locking nuts from Bolt 1.
3. Assemble black anodised bracket. Use 1 off M10 x 120 x 1.25 & 1 off M10 x 60 x 1.25 nickel plated bolts. Re-use the original M10 locking nut.

Note: You may need to loosen the Air Breather Bottle temporarily.

4. Tighten both bolts to 48 N/m, as per manufacturers recommendations.
5. Re-assemble Left side fairing
6. Assemble Crash Mushroom FS-675-2006-LHS-S.
Tighten to 25 N/m DO NOT OVERTIGHTEN

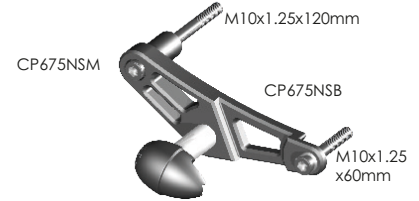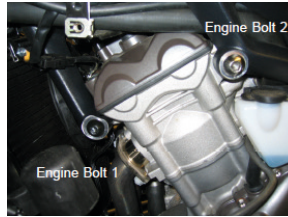



BULLET FRAME SLIDER - RIGHT HAND SIDE - STREET

PART NO. FS-675-2006-RHS-SET-S

1. Remove right side fairing
2. Unscrew engine bolts 1 & 2 as shown. Retain M10 locking nuts from Bolt 1.
3. Assemble black anodised bracket. Use 1 off M10 x 120 x 1.25 & 1 off M10 x 60 x 1.25 nickel plated bolts. Re-use the original M10 locking nut.


Note: You may need to loosen the Air Breather Bottle temporarily.

4. Tighten both bolts to 48 N/m, as per manufacturers recommendations.
5. Re-assemble Right side fairing
6. Assemble Crash Mushroom FS-675-2006-RHS-S.
Tighten to 25 N/m. DO NOT OVERTIGHTEN

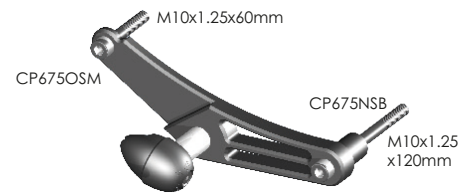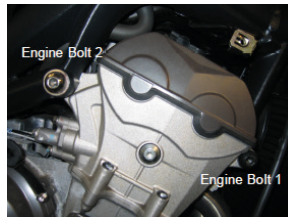

REPLACEMENT BULLET FRAME SLIDER SET - PART NO. FS-675-2006-S - STREET

PART NO. FS-675-2006-LHS-S:

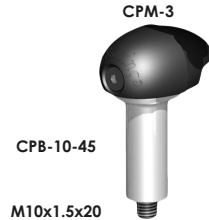


PART NO.. FS-675-2006-RHS-S:




1. Remove upper engine mounting bolt, located through the fairing opening.
2. Assemble bolt through the aluminium bush into correct position.
3. Tighten to 25NM torque.
4. Slide bullet moulding onto aluminium bush.
5. Screw M6 bolt into front of bullet moulding hand tight.

REPLACEMENT BULLET FRAME SLIDER SET - PART NO. FS-675-2006-R - RACE

PART NO.. FS-675-2006-LHS-R:

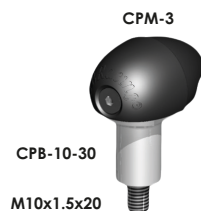

PART NO. FS-675-2006-RHS-R:

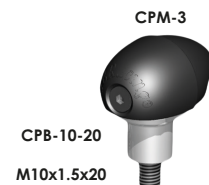


1. Remove upper engine mounting bolt, located through the fairing opening.
2. Assemble bolt through the aluminium bush into correct position.
3. Tighten to 25NM torque.
4. Slide bullet moulding onto aluminium bush.
5. Screw M6 bolt into front of bullet moulding hand tight.

STOCK 6mm

FRONT SPINDLE PROTECTORS - LEFT HAND SIDE

PART NO. BA-675-LHS-GBR

- 1 Assemble the Stainless Steel bar through the front spindle.
- 2 Place the Left Hand Side spindle protector assembly over the bar.
- 3 Assemble the M6 Washer first, then the lock nut. (The Washer must be used).
Note: You can prevent the bar from rotating by holding the opposite end of the bar by the slot providing with a flat headed screw driver.
- 4 When both ends are fitted, tighten the lock nuts together to a Torque of 10Nm. There should be approximately 2-3 threads equally showing over the lock nuts.

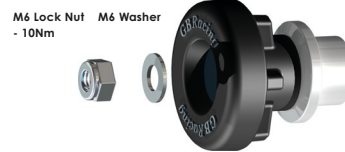

FRONT SPINDLE PROTECTORS - RIGHT HAND SIDE

PART NO. BA-675-RHS-GBR

- 1 Assemble the Stainless Steel bar through the front spindle.
- 2 Place the Right Hand Side spindle protector assembly over the bar.
- 3 Assemble the M6 Washer first, then the lock nut. (The Washer must be used).
Note: You can prevent the bar from rotating by holding the opposite end of the bar by the slot providing with a flat headed screw driver.
- 4 When both ends are fitted, tighten the lock nuts together to a Torque of 10Nm. There should be approximately 2-3 threads equally showing over the lock nuts.



Note: With all 2007-2009 Triumph 675 models, the correct version to use is our 6mm version. With all 2010 models, Triumph produced two different swing arm types during that year, one with 6mm bobbins and the other with 8mm bobbins. Therefore, if you have a 2010 model, you will need to check using a 6 or 8mm bolts, which are the correct ones for your motorcycle.

PADDOCK STAND / BOBBIN SET

PART NO. BA12-6-GBR-SET

- 1 Assemble M6 x 40mm Bolt & M6 Washer through the moulded bobbin.
- 2 Tighten bolts to swing arm boss, 8 Nm.
DO NOT OVERTIGHTEN



1 x M6 Washer

1 x Moulded Paddock Stand / Bobbin

OTHER PARTS THAT FIT THIS BIKE: **CP675-SET-GBR** CRASH MUSHROOM FRAME SLIDER SET. See individual part fitting instruction.

Protection Bundle: **CP675-CS-GBR**

EC-D675-1-GBR, EC-D675-2-GBR, EC-D675-3-GBR, CGA06-GBR, BA12-6-GBR-SET, BA-675-GBR-SET, FS-675-2006-CS-S

Engine Cover Set: **EC-D675-SET-GBR**



EC-D675-1-GBR, EC-D675-2-GBR, EC-D675-3-GBR

STOCK 6mm

DAYTONA 675 MODELS ONLY:

UNIVERSAL BRAKE LEVER GUARD WITH 16mm INSERT (Fits tube inside diameters from 15.8mm to 17.9mm)
PART NO. BLG-16-A160-GBR

- 1 Remove existing bar end and follow instructions to remove existing internal assembly:
- 2 **See Fig. 1 & 2** Use the bolt that holds the bar end in and re-thread it into the internal assembly bolt hole to get a purchase on it.
- 3 Push a small screwdriver into the hole at the end of the throttle tube, depressing the tab of the insert shown in **Fig.1**.
- 4 While holding the tab down, pull to extract the assembly from the tube as shown in **Fig.2**.
NOTE: This may be tight to remove.
- 5 Insert the supplied GBRacing bar end.
- 6 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 7 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

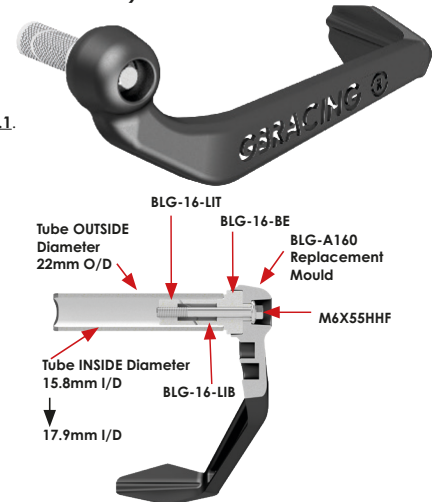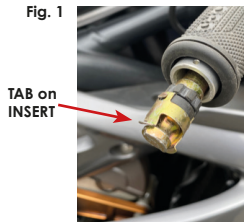

UNIVERSAL CLUTCH LEVER GUARD WITH 16mm INSERT (Fits tube inside diameters from 15.8mm to 17.9mm)
PART NO. CLG-16-A160-GBR

- 1 Remove existing bar end and follow instructions to remove existing internal assembly:
- 2 **See Fig. 1 & 2** Use the bolt that holds the bar end in and re-thread it into the internal assembly bolt hole to get a purchase on it.
- 3 Push a small screwdriver into the hole at the end of the clutch tube, depressing the tab of the insert shown in **Fig.1**.
- 4 While holding the tab down, pull to extract the assembly from the tube as shown in **Fig.2**.
NOTE: This may be tight to remove.
- 5 Insert the supplied GBRacing bar end.
- 6 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 7 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

