

THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

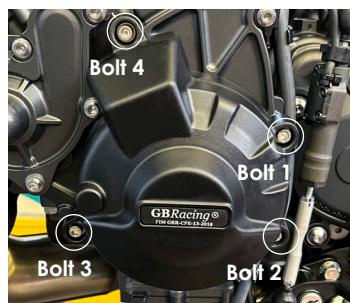
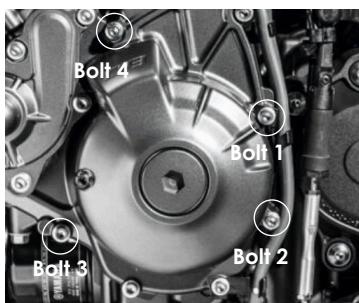
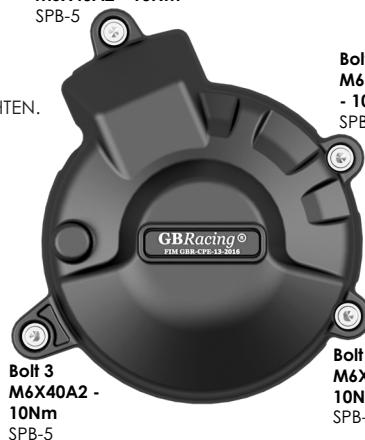
Secondary Alternator Cover Part No. EC-R9-2025-1-GBR / Secondary Clutch Cover Part No. EC-R9-2025-2-GBR /

Secondary Pulse Cover Part No. EC-R9-2025-3-GBR / Secondary Water Pump Cover Part No. EC-R9-2021-5-GBR

Bullet Frame Slider Set Part No. FS-MT09-2021-S / XSR900 2022-2024 & XSR900 GP 2024 MODELS ONLY: Frame Sliders STREET - Part No. FS-XSR900-2022-S

SECONDARY ALTERNATOR COVER – PART NO. EC-R9-2025-1-GBR


- 1 Remove 4 existing bolts from the stock Alternator cover, shown as position Bolts 1, 2, 3 & 4.
- 3 Place the Secondary Alternator Cover over the stock cover.
- 4 Assemble 4 replacement bolts loosely in the correct position as shown.
- 5 Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations. DO NOT OVERTIGHTEN.


Bolt 4
M6X40A2 - 10Nm
SPB-5

Bolt 1
M6X55A2
- 10Nm
SPB-5

Bolt 2
M6X50A2 -
10Nm
SPB-3

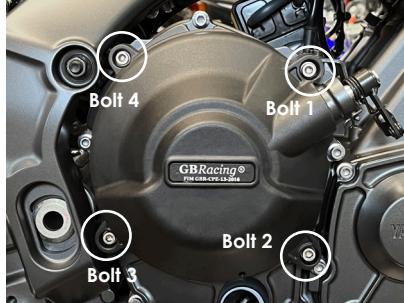SECONDARY CLUTCH COVER – PART NO. EC-R9-2025-2-GBR

- 1 Please remove plastic dust cover before fitting the GBRacing cover – remove the bolts from the plastic dust cover. Put the left and top bolts (**M6x30**) back in their original locations (minus dust cover) See [Fig.1](#).
- 2 Remove 4 existing bolts from the stock clutch cover, shown as position Bolts 1, 2, 3 & 4.
- 3 Place the Secondary Clutch Cover over the stock cover.
- 4 Assemble 4 replacement bolts loosely in the correct position as shown.
- 5 Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations. DO NOT OVERTIGHTEN.

Fig 1

Bolt 4
M6X45A2
- 10Nm
SPB-7

Bolt 1
M6X45A2 -
10Nm
SPB-7



Bolt 2
M6X45A2 -
10Nm
SPB-7

SECONDARY PULSE COVER – PART NO. EC-R9-2025-3-GBR

For the YZF-R9: Remove the RHS fairing and snip off the internal fairing support as shown, in order to provide clearance for the GB Racing cover. The GB Racing cover will now work as the fairing support.


- 1 Remove the 4 standard bolts
- 2 Place the secondary pulse cover against the standard cover using the 4 supplied bolts.
- 3 Tighten all 4 bolts to 10nm as per manufacturer's recommendations

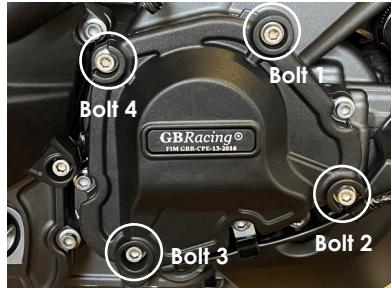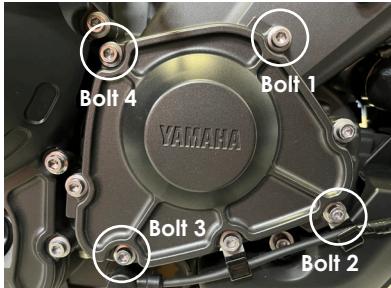DO NOT OVERTIGHTEN




Bolt 4
M6X30A2 - 10Nm
SPB-5

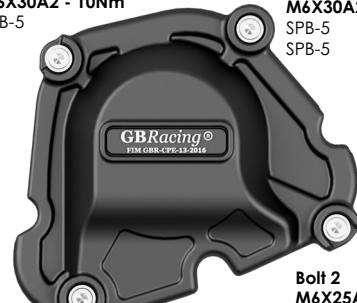Bolt 1
M6X30A2 - 10Nm
SPB-5
SPB-5




Bolt 2
M6X25A2 - 10Nm
SPB-3

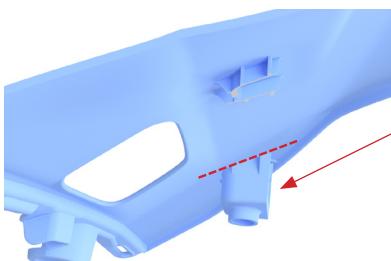Bolt 3
M6X25A2 - 10Nm
SPB-3



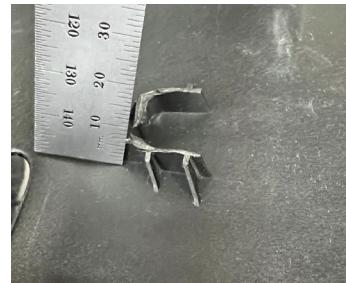For the YZF-R9: Remove this bracket covering the Pulse cover
Maximum 5mm protrusion.



SECONDARY WATER PUMP COVER PART NO. EC-R9-2025-5-GBR

- 1 Fitting requires a **COLD** engine.
- 2 Ensure radiator cap is firmly on. Do not loosen.
- 3 Remove Bolt 1 & 3 before removing Bolt 2. Once bolt 2 is removed you will lose approx 6 drops of coolant and it will not drip anymore. Follow **Fig 2.** to make sure that the supplied copper washers are in the correct positions.
- 4 Insert **Bolt 2** with the washers into correct hole and hand-tighten - See **Fig 1.**
- 5 Then insert Bolts 1 & 3 and tighten to correct torque setting 10Nm. DO NOT OVERTIGHTEN
- 6 Check the water level as per the manufacturer's recommendations.



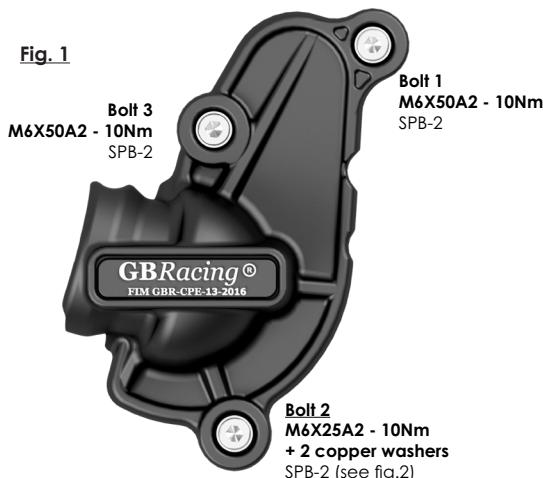


Fig. 1

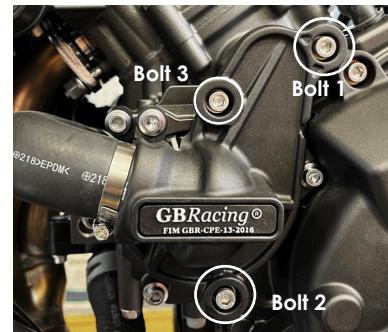

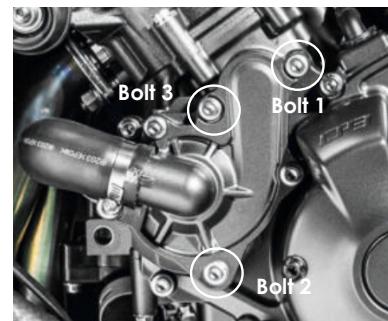

YZF-R9 2025-2026

MT-09, MT-09 SP, FZ-09, TRACER,
TRACER GT + & SCRAMBLER 2021-2026
& XSR900 2022-2026
XSR900 GP 2024-2026

FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN



FIT MT-09 MODELS ONLY

BULLET FRAME SLIDER SET: BOTH SIDES

PART NO. FS-MT09-2021-S

- 1 Remove upper engine mounting bolt.
- 2 Assemble bolt through the aluminium bush into correct position.
- 3 Tighten to 60NM torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt through moulding hand tight.



LEFT HAND SIDE

FS-MT09-2021-LHS-S



RIGHT HAND SIDE

FS-MT09-2021-RHS-S



REPLACEMENT BULLET MOULDED PART

Part No. CPM-3

or

CPM-3-GP

This essentially replaces the CPM-3 puck, allowing a GoPro camera mount to be attached to the bike using our mounting system.



FIT XSR900 2022-2023 & XSR900 GP 2024 MODELS ONLY: BULLET FRAME SLIDER SET - Part No. FS-XSR900-2022-S:

BULLET FRAME SLIDER - LEFT HAND SIDE - STREET – PART NO. FS-XSR900-2022-LHS-S



BULLET FRAME SLIDER - RIGHT HAND SIDE - STREET – PART NO. FS-XSR900-2022-RHS-S



INSTRUCTIONS FOR THESE PARTS:

- 1 Remove front engine mounting bolt with washer.
NOTE: On the RHS do not remove the conical washer.
- 2 Assemble bolt through the aluminium bush into correct position.

- 3 Tighten to 40NM torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt into front of bullet moulding hand tight.